
Installation Instruction

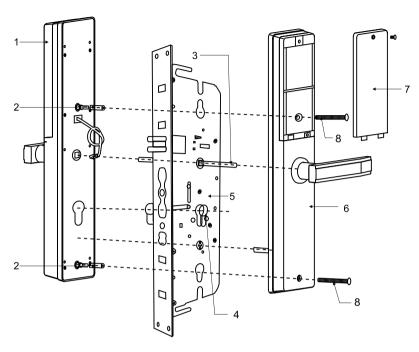

1.Front Panel

4.Lock Cylinder

7.Battery Cover

2. Joint Pipe

5.Lock Body

8. Joint Screw

3. Quadrate Core 6. Back Panel

Lock change direction



Front Panel

Back Panel

Technical Parameters

Fingerprint Capacity: 100 pcs Password Capacity: 10 group Card Capacity: 200 pcs Password Length: 6-12 Phantom Password Length: 36 Power: 4.5V-10V

Quiescent Current:<0.04mA

Dynamic Current:<250mA

Working Temperature: -20-60° Working Humidity: 15%-95%

Function and Operation

1.Setting button function:

- Long click setting button: reset the system(button inside the battery cover)
- ♦ Slow click setting button 2 times to change language(English&Chinese)

2.Reset

- ♦ Long click the setting button 5 seconds until hear "Ding Dang" then press "#" to confirm. It will clear all the data.
- ♦ After reset, any password(6-12 length), any IC card could open the door.

3.Add user

- ♦ The system could max add 200 user, the first three is administrator, then general user.
- ♦ Fingerprint, password, IC card could be setted as administrator and general user.
- ♦ After reset, perss * and #, it will ask you to register administrator, input fingerprint, password or card, after add 3 administrator, then add general user.
- ♦ Not reset status, press * and #, it will ask you verify administrator, after verified it will prompt 1.add user 2.delete user 3.app settings 4. restore to default. Later press 1 and input fingerprint, password or IC card.

4.Delete user

♦ Press * and # and verify administrator, it will prompt 1.add user 2.delete user 3.app setting 4. restore to default. Press 2 and input the fingerprint, password+#, card which want to be delete.

5.App settings

♦ This function already remove in lock and added in the app.

6.Other function

- Continue to input wrong info 5 times, it will lock for 3 minitus and will not respond for 3 minitus.
- Password protect from spy: for example passwrd 123456, you could input 968581234562875, you could add not related number in the front and in the back of password, then press # to open the lock, max each 12 number in front and in the back.
- ♦ When power lower than 4.8V, the system will prompt power is low, pls change battery.
- ♦ If power lower than 4.5V, it will stop work and you must change battery.

App User Manual




1.Download App

Scan the QR code to download smartlife app, or you can also search keyword smartlife at app store or google play to download.

2.Register and Add

♦ Register and login. Click setting button and digit "5" will flash. Later click the top right "+", choose wifi lock



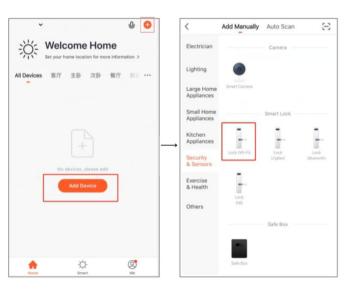

3.Unlock by app

- ♦ Click # in lock, app will prompt to ask unlock, click unlock button in app.
- Click remote dynamic password in app, input the password in the lock, you will open the lock.
- ♦ Click Temprary PW in app to add temporary password.

